

КОЛИЧЕСТВО ЗАЛИВАЕМОГО МАСЛА - МОНТАЖНЫЕ ПОЛОЖЕНИЯ

IT EN DE

Quantità di lubrificante

Quantity of lubricant

Schmiermittelmenge

Tab.4


RCV	Posizioni di montaggio / Assembly position / Einbaulage								
	B3	B5	B6	B7	B8	V1	V3	V5	V6
141	0.16					0.19	0.15	0.19	0.15
191	0.28								
241	0.4								
281	0.7					0.4	1.0	0.7	
381	0.8	0.8	1.5	1.5	2.0	0.4	2.0	1.0	2.0
162	0.17					0.27	0.25	0.27	0.25
202A	0.2					0.33	0.28	0.33	0.28
202-203	0.55								
252A-253A	0.55					0.55	0.6	0.55	0.6
252-253	0.7								
302A	1.0					1.15	1.10	1.15	1.10
303A	1.0					1.35	1.30	1.35	1.30
302-303	1.3					1.5	1.3	1.5	1.3
352-353	1.3					1.5	1.3	1.5	1.3
452-453	2.5	2.3	2.3	2.3	2	2.9	3.4	3	3.4
552-553	3.8	3.5	3.5	3.5	3	4.5	5.8	5	5.5
582-583	4.9	4.9	4.9	4.9	5.6	7.3	8.5	7.3	8.5
602-603	8.5	8.5	8.0	8.0	8.5	12.5	12	12.5	12

Posizioni di montaggio e orientamento morsetteria


МОНТАЖНЫЕ ПОЛОЖЕНИЯ И  
ОРИЕНТАЦИЯ КЛЕМНОЙ КОРОБКИ  
ЭЛЕКТРОДВИГАТЕЛЯ

Assembly position and orientation of terminal box

CV.1 - RCV.1 / P, PF

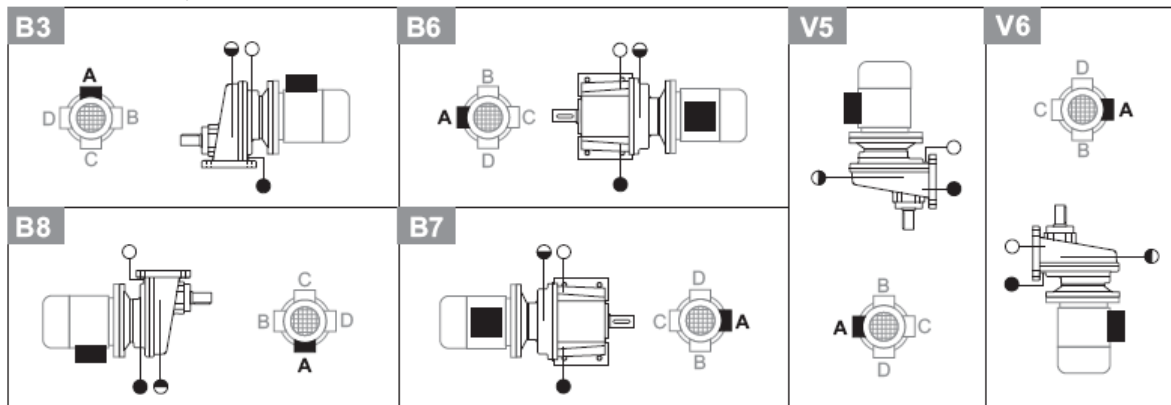

CV.1 - RCV.1 / N, NF

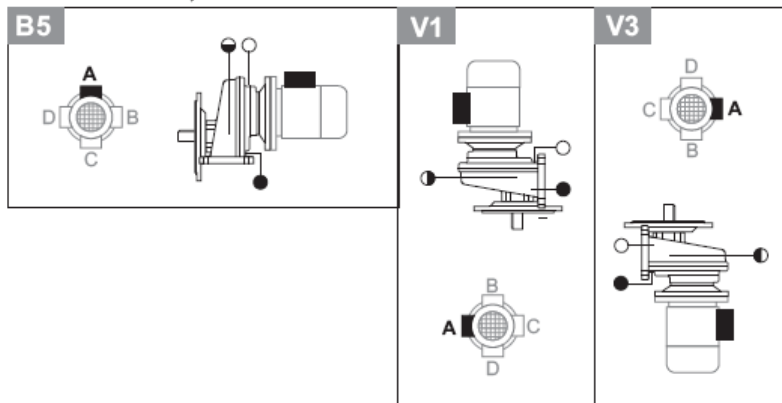

- СОПУН / Breather plug / Öleinfüllung
- УРОВНЯ / Level plug / Ölstand
- СЛИВА / Drain plug / Ölabblass